



How to prevent a clog

- 1** Regularly recharge to top up your device. Doing this will optimize the vaporization.

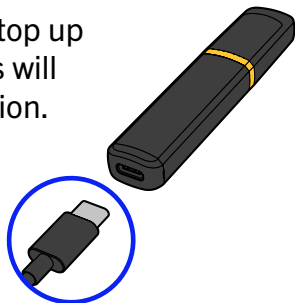

- 3** Elevation can force oil into the atomizer. Transporting the STIQ upside down can help prevent clogs.

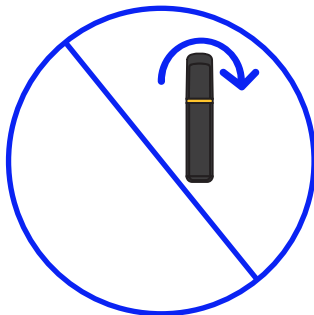

- 2** Don't leave your STIQ in a hot car, direct sunlight, or in a hot environment. It could cause flooding and leaking through the atomizer.



- 4** With normal use, there will be a small amount of build-up from the vaporized oil. After your hit, and with your mouth not touching the mouthpiece, lightly blow out the vapor.



How to clear a clog








- 1 If the clog remains, blow strongly from the bottom of the STIQ to preheat and clear the clog.



- 2 If the clog hasn't cleared, you likely have lots of build up. Take a few big hits to vaporize the accumulated oil and clear the clog.



What the LED lights mean

Active use indication:	solid light	
Charging:	solid light	
Fully charged:	light off	
10 second draw indicator: . .	flashing light	 2x
Short circuit:	solid light 2 seconds	
Low battery:	flashing light	 10x
Unplug:	flashing light	 3x

If you plug in your STIQ and there is no light, that could indicate your battery is fully charged.

If the STIQ doesn't activate:

- Try a different USB-C charging cable
- Try a different charging source, for example a laptop computer

Warning: Do not use power chargers that output more than 5 volts/1amp. This may damage the battery. For example, Fast Chargers could damage your STIQ. Check the voltage printed on your charger!